

# AKD<sup>®</sup> sercos<sup>®</sup> III Communication



**Edition December 2014, Revision C**

Valid for firmware version 1.13

Part Number 903-200020-00

Original Documentation

Keep all manuals as a product component during the life span of the product.

Pass all manuals to future users/owners of the product.

**KOLLMORGEN**

*Because Motion Matters™*

**Revision History**

Revision	Remarks
A, 07/2013	Beta version
B, 12/2013	Added Encoder Position on Power Up (→ p. 18) function group (IDNP2285, IDNP2287, IDNP2289).
C, 12/2014	Added sercos® IDNs (→ p. 21): 51, 53, 117, 256, and 257.

**Trademarks**

- AKD is a registered trademark of Kollmorgen Corporation
- sercos® is a registered trademark of sercos® international e.V.
- WINDOWS is a registered trademark of Microsoft Corporation
- EnDat is a registered trademark of Dr. Johannes Heidenhain GmbH
- HIPERFACE is a registered trademark of Max Stegmann GmbH

**Current patents**

- US Patent 5,162,798 (used in control card R/D)
- US Patent 5,646,496 (used in control card R/D and 1 Vp-p feedback interface)
- US Patent 6,118,241 (used in control card simple dynamic braking)
- US Patent 8,154,228 (Dynamic Braking For Electric Motors)
- US Patent 8,214,063 (Auto-tune of a Control System Based on Frequency Response)

**Technical changes which improve the performance of the device may be made without prior notice.**

Printed in the United States of America

This document is the intellectual property of Kollmorgen. All rights reserved. No part of this work may be reproduced in any form (by photocopying, microfilm or any other method) or stored, processed, copied or distributed by electronic means without the written permission of Kollmorgen.

# 1 Table of Contents

---

<b>1</b>	<b>Table of Contents</b>	<b>3</b>
<b>2</b>	<b>General</b>	<b>5</b>
2.1	About this Manual	6
2.2	Target Group	6
2.3	Symbols Used	7
<b>3</b>	<b>Safety</b>	<b>8</b>
3.1	Safety Instructions	9
3.2	Use as directed	9
3.3	Prohibited use	10
<b>4</b>	<b>Installation and Setup</b>	<b>11</b>
4.1	Important Notes	12
4.2	sercos® III Onboard	13
4.2.1	LED functions	13
4.2.2	Connection technology	13
4.3	Network Topologies	13
4.3.0.1	Line Topology	13
4.3.0.2	Ring Topology	14
4.3.0.3	sercos® Addressing	14
<b>5</b>	<b>sercos® ASCII Parameters and Commands</b>	<b>15</b>
5.1	S3.ADDRESS	16
<b>6</b>	<b>sercos® Function Groups</b>	<b>17</b>
6.1	Absolute Homing	18
6.2	Drive State Machine	18
6.3	Encoder Position on Power Up	18
6.4	Position Scaling	18
6.4.1	Default Scaling	19
6.5	Velocity Scaling	19
6.5.1	Default Settings	19
<b>7</b>	<b>sercos® IDNs</b>	<b>21</b>
7.1	IDN 17: List of All Operation Data	21
7.2	IDN 33: Secondary Operation Mode 1	21
7.3	IDN 32: Primary Operation Mode	21
7.4	IDN 51: Position Feedback Value 1 (Motor Feedback)	21
7.5	IDN 52: Reference Distance 1	21
7.6	IDN 53 Position Feedback Value 2 (External Feedback)	22
7.7	IDN 76: Position Data Scaling Type	22
7.8	IDN 79: Rotational Position Resolution	22
7.9	IDN 92: Bipolar Torque Limit	22
7.10	IDN 99: Command: Reset Class 1 Diagnostic (Clear Fault)	22
7.11	IDN 103: Modulo Value	22
7.12	IDN 116: Resolution Feedback 1	23
7.13	IDN 117: Resolution Feedback 2	23
7.14	IDN 134: Drive Control	23
7.15	IDN135: Drive Status	23

---

7.16	IDN 175: Displacement Parameter 1 .....	24
7.17	IDN 187: IDN-list of Configurable Data as Producer .....	24
7.18	IDN 188: List of IDN-list of Configurable Data as Consumer .....	24
7.19	IDN 189: Following Distance .....	24
7.20	IDN 256: Multiplication Factor 1 .....	24
7.21	IDN 257: Multiplication Factor 2 .....	25
7.22	IDN 264: Back-up Working Memory Procedure Command .....	25
7.23	IDN 277: Position Feedback Type 1 .....	25
7.24	IDN 403: Position Feedback Value Status .....	26
7.25	IDN 447: Set Absolute Position Procedure Command .....	27
7.26	IDN 448: Set Absolute Position Control Word .....	27
7.27	IDN 1040: Slave Address .....	28
7.28	IDNP2285: FB1.INITPSAVED .....	28
7.29	IDNP2287: FB1.INITPSTATUS .....	28
7.30	IDNP2289: FB1.INITPWINDOW .....	29
7.31	IDNP3050: Analogue Output User .....	30
7.32	IDNP3051: Analogue Output Value .....	30
7.33	IDNP3036: Analogue Input Value .....	30
7.34	IDNP3060: Digital Output 1 User .....	31
7.35	IDNP3061: Digital Output 1 Value .....	31
7.36	IDNP3062: Digital Output 2 User .....	31
7.37	IDNP3063: Digital Output 2 Value .....	32
7.38	IDNP3030 Digital Inputs Value .....	32

## 2 General

---

<b>2.1 About this Manual</b> .....	<b>6</b>
<b>2.2 Target Group</b> .....	<b>6</b>
<b>2.3 Symbols Used</b> .....	<b>7</b>

## 2.1 About this Manual

This manual, *AKD sercos<sup>®</sup> III Communication*, describes the installation, setup, IDNs, and software protocol for the AKD sercos<sup>®</sup> III product series. All AKD sercos<sup>®</sup> III drives have built-in sercos<sup>®</sup> III functionality. An additional option card is not required.

A digital version of this manual (pdf format) is available on the disk included with your drive. Manual updates can be downloaded from the Kollmorgen website.

Related documents for the AKD series include:

- *AKD Quick Start* (also provided in hard copy). This guide provides instructions for initial drive setup and connection to a network.
- *AKD Installation Manual* (also provided in hard copy for EU customers). This manual provides instructions for installation and drive setup.
- *AKD User Guide*. This manual includes completeWorkBench instructions, faults and warnings, and parameter descriptions.

## 2.2 Target Group

This manual addresses personnel with the following qualifications:

- Installation: only by electrically qualified personnel.
- Setup: only by qualified personnel with extensive knowledge of electrical engineering and drive technology
- Programming: software developers, project-planners

The qualified personnel must know and observe the following standards:







- ISO 12100, IEC 60364 and IEC 60664
- National accident prevention regulations



### **WARNING**

During operation there are deadly hazards, with the possibility of death, severe injury or material damage. The operator must ensure that the safety instructions in this manual are followed. The operator must ensure that all personnel responsible for working with the servo drive have read and understand the manual.

## 2.3 Symbols Used

Symbol	Indication
 <b>DANGER</b>	Indicates a hazardous situation which, if not avoided, will result in death or serious injury.
 <b>WARNING</b>	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.
 <b>CAUTION</b>	Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
<b>NOTICE</b>	Indicates situations which, if not avoided, could result in property damage.
<b>NOTE</b>	This symbol indicates important notes.
	Warning of a danger (general). The type of danger is specified by the text next to the symbol.
	Warning of danger from electricity and its effects.
	Warning of suspended loads.

## 3 Safety

---

<b>3.1 Safety Instructions</b> .....	<b>9</b>
<b>3.2 Use as directed</b> .....	<b>9</b>
<b>3.3 Prohibited use</b> .....	<b>10</b>



### 3.1 Safety Instructions



#### **DANGER**

Never disconnect any electrical connections to the drive while the drive is live. There is a danger of electrical arcing with damage to contacts and serious personal injury. Wait at least seven minutes after disconnecting the drive from the main supply power before touching potentially live sections of the equipment (e.g. contacts) or undoing any connections.

Capacitors can still have dangerous voltages present up to 7 minutes after switching off the supply power. To be sure, measure the voltage in the DC Bus link and wait until it has fallen below 60 V.

Control and power connections can still be live, even if the motor is not rotating.



#### **DANGER**

During operation there are deadly hazards, with the possibility of death, severe injury or material damage. Do not open or touch the equipment during operation. Keep all covers and cabinet doors closed during operation. Touching the equipment is allowed during installation and commissioning for properly qualified persons only.

During operation, drives may have uncovered live components, depending on their level of enclosure protection.

Drives may have hot surfaces during operation. Heat sink can reach temperatures above 80°C.



#### **WARNING**

Electronic equipment can fail. The user is responsible for ensuring that in the event of a failure of the servo amplifier, the drive is set to a state that is safe for both machinery and personnel, for instance with the aid of a mechanical brake.

Drives with servo amplifiers and sercos<sup>®</sup> III are remote-controlled machines. They can start to move at any time without previous warning. Take appropriate measures to ensure that the operating and service personnel is aware of this danger.

Implement appropriate protective measures to ensure that any unintended start-up of the machines cannot result in dangerous situations for personnel or machinery. Software limit-switches are not a substitute for the hardware limit-switches in the machine.

### 3.2 Use as directed

Drives are components that are built into electrical plants or machines and can only be operated as integral components of these plants or machines. The manufacturer of the machine used with a drive must generate a risk assessment for the machine and take appropriate measures to ensure that unforeseen movements cannot cause personnel injury or property damage.

- Observe the chapters "Use as directed" and "Prohibited use" in the *AKD Installation Manual*.
- The sercos<sup>®</sup> III interface serves only for the connection of the *AKD* to a master with sercos<sup>®</sup> III connectivity.

### 3.3 Prohibited use

Use other than that described in chapter "Use as directed" is not intended and can lead to personnel injuries and equipment damage. The drive may not be used with a machine that does not comply with appropriate national directives or standards. The use of the drive in the following environments is also prohibited:

- potentially explosive areas
- environments with corrosive and/or electrically conductive acids, alkaline solutions, oils, vapors, dusts
- ships or offshore applications

The connectors X5 and X6 of the *AKD sercos<sup>®</sup> III* drive may not be used for any ethernet protocol except sercos<sup>®</sup> III.

## 4 Installation and Setup

---

<b>4.1 Important Notes</b> .....	<b>12</b>
<b>4.2 sercos® III Onboard</b> .....	<b>13</b>
<b>4.3 Network Topologies</b> .....	<b>13</b>

## 4.1 Important Notes



### WARNING

Electronic equipment can fail. The user is responsible for ensuring that, in the event of a failure of the servo amplifier, the drive is set to a state that is safe for both machinery and personnel, for instance with the aid of a mechanical brake.

Drives with servo amplifiers and sercos<sup>®</sup> III are remote-controlled machines. They can start to move at any time without previous warning. Take appropriate measures to ensure that the operating and service personnel is aware of this danger.

Implement appropriate protective measures to ensure that any unintended start-up of the machines cannot result in dangerous situations for personnel or machinery. Software limit-switches are not a substitute for the hardware limit-switches in the machine.

### NOTICE

Install the drive as described in the *Installation Manual*. The wiring for the analog setpoint input and the positioning interface, as shown in the wiring diagram in the *Installation Manual*, is not required. Never break any of the electrical connections to the drive while it is live. This action can result in destruction of the electronics.

### NOTICE

The drive's status must be monitored by the PLC to acknowledge critical situations. Wire the FAULT contact in series into the emergency stop circuit of the installation. The emergency stop circuit must operate the supply contactor.

### NOTICE

Do not connect the Ethernet line for the PC with the set up software to the sercos<sup>®</sup> III interface X5/X6. The set up Ethernet cable must be connected to the service interface on X11.

### NOTE

Use WorkBench to alter drive settings. Any other alterations will invalidate the warranty.

### NOTE


Because of the internal representation of the position-control parameters, the position controller can only be operated if the final limit speed of the drive does not exceed: **rotary**  
 at sinusoidal<sup>2</sup> commutation: 7500 rpm  
 at trapezoidal commutation: 12000 rpm.  
**linear**  
 at sinusoidal<sup>2</sup> commutation: 4 m/s  
 at trapezoidal commutation: 6.25 m/s

### NOTE

All the data on resolution, step size, positioning accuracy etc. refer to calculatory values. Non-linearities in the mechanism (backlash, flexing, etc.) are not taken into account. If the final limit speed of the motor must be altered, then all the parameters that were previously entered for position control and motion blocks must be adapted.

## 4.2 sercos® III Onboard

Connection to the sercos® III Network is made using X5 (in port) and X6 (out port).

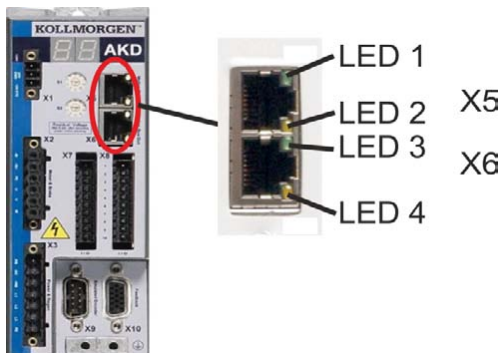

### 4.2.1 LED functions

The communication status is indicated by built-in LEDs.

Connector	LED#	Name	Function
X5	LED1	IN port Link	ON = active OFF = not active
	LED2	RUN	ON = running OFF = not running
X6	LED3	OUT port Link	ON = active OFF = not active
	LED4	-	-

### 4.2.2 Connection technology


Connect to the sercos® III network using RJ-45 connectors.

## 4.3 Network Topologies

AKD sercos® III supports line and ring network topologies.


### 4.3.0.1 Line Topology

Form a line topology by connecting the master to the In port (X5) of the first sercos® III slave. Then connect the first slave's Out port (X6) to the In port of the next slave. The last slave is not connected back to the master and its Out port can be used to analyze sercos® traffic.

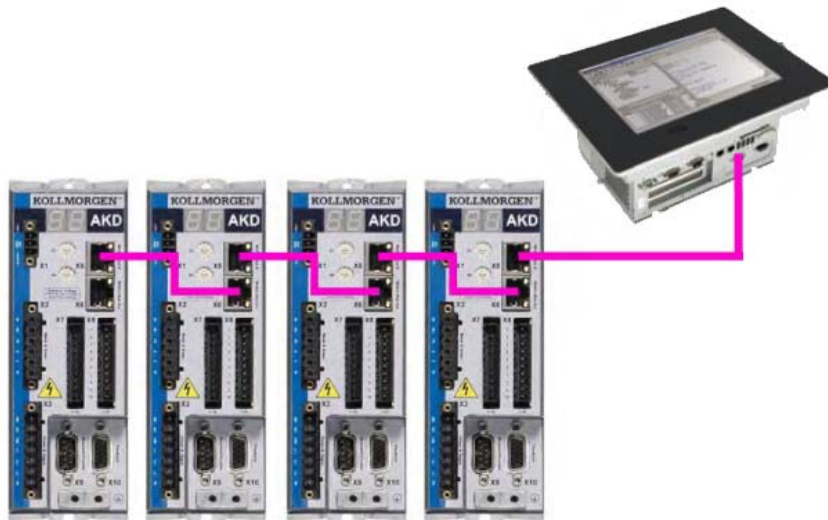

#### 4.3.0.2 Ring Topology

Form a ring topology by connecting the master to the In port (X5) of the first sercos<sup>®</sup> III slave. Then connect the first slave's Out port (X6) to the In port of the next slave. When the last slave is reached, connect its Out port back to the master.

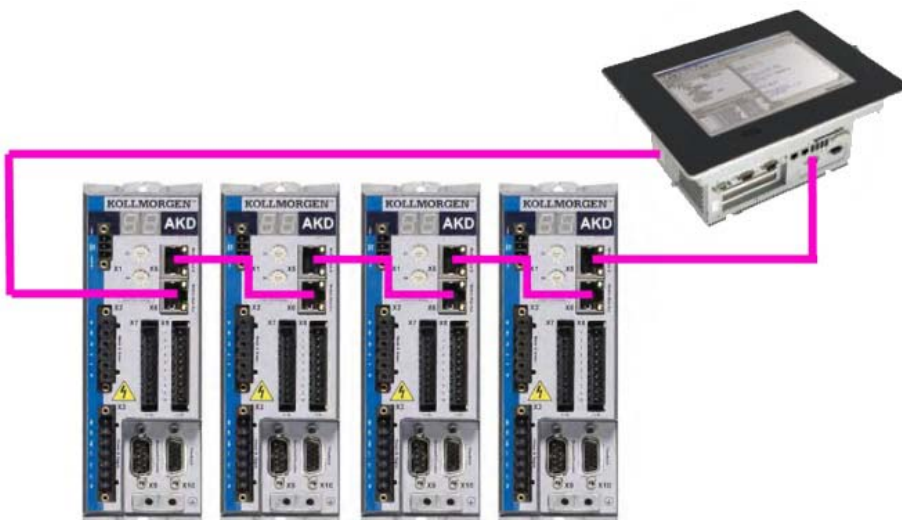

#### 4.3.0.3 sercos<sup>®</sup> Addressing

Set the sercos<sup>®</sup> slave address using either IDN1040 (sercos address) or the ASCII command S3.ADDRESS.

A write procedure through the sercos service channel on IDN1040 also performs a "Save to Drive" command. If the S3.ADDRESS (→ p. 16) command is given through WorkBench, the new address will be stored in RAM. An explicit call of DRV.NVSAVE in the terminal is needed to save the parameter values to the non-volatile memory.

## 5 sercos® ASCII Parameters and Commands

---

5.1 S3.ADDRESS .....	16
----------------------	----

## 5.1 S3.ADDRESS

General Information	
Type	NV Parameter
Description	Sets and reads the sercos® slave address.
Units	N/A
Range	0 to 511
Default Value	1
Data Type	Integer
Start Version	M_01-09-03-000

### Variants Supported

Variant	Supported
AKD Base	No
AKD with Position Indexer	No
AKD EtherCAT	No
AKD CANopen	No
AKD BASIC	No
AKD SynqNet	No
AKD EtherNet/IP	No
AKD Profinet	No
AKD sercos® III	Yes
AKD-N	No
AKD-C	No

### Description

Sets and reads the sercos® slave address.



## 6 sercos® Function Groups

The AKD sercos® III supports the basic function groups that are defined and specified by the sercos® Technical Working Group. Detailed definitions for the drive profile IDNs can be found at: [https://wiki.sercos.org/rc/Main\\_Page](https://wiki.sercos.org/rc/Main_Page).

Additional functionality can be executed using manufacture specific IDNs. For detailed information on the ASCII parameters and commands that are mapped to manufacture specific IDNs, see appendix A of the AKD User Guide on [kollmorgen.com](http://kollmorgen.com).

---

<b>6.1 Absolute Homing</b> .....	<b>18</b>
<b>6.2 Drive State Machine</b> .....	<b>18</b>
<b>6.3 Encoder Position on Power Up</b> .....	<b>18</b>
<b>6.4 Position Scaling</b> .....	<b>18</b>
<b>6.5 Velocity Scaling</b> .....	<b>19</b>

## 6.1 Absolute Homing

The absolute homing can be useful to assign a new “absolute home position” to the drive one time in commissioning phase. To assign the absolute home position, the following steps are required:

1. The absolute homing feature is only supported if the feedback is an absolute measuring device (e.g. multiturn Endat 2.1 feedback). This can be checked via IDN 227 (position feedback type 1 Bit 6-7).
2. Write the new “wanted” absolute home position in IDN 52 (reference distance 1).
3. Choose position feedback 1 in IDN 448 (set absolute position control word Bit 0 to 1).
4. Run the procedure command IDN 447 (set absolute position procedure command).
5. IDN 403 (position feedback status) will report if the new home position is successfully acquired. IDN 51 (position feedback 1) does now report the new “wanted” absolute home position (matches with IDN 52). The difference is stored in the IDN 175 (displacement parameter IDN 175).  
**Note:** Depending on the feedback type, the position feedback 1 values are noisy and must not match 100% to IDN 52.
6. To store the new home position, it is required to run the IDN 264 (backup working memory command).

## 6.2 Drive State Machine

The AKD follows the drive state machine defined in the sercos® specifications (FG Drive State Machine). Use the control word (IDN134) and status word (IDN135) to control and verify the state transitions. Behavior for disabling the drive also depends on the configuration of the ASCII parameters DRV.DISMODE and DRV.DEC.

Drive On/Off (Bit 15)	Drive Enable (Bit 14)	Drive Halt (Bit 13)	Description
0	x	x	Write "Drive Off" (Bit 15 = 0) to disable the drive with the configured DRV.DISMODE.
1	0	x	Set "Drive Enable" from 1 to 0 to disable the drive with the configured DRV.DISMODE.
1	1	0	Set bit 14 and 15 to enable the power stage.  If the "Drive Halt" bit changes from 1 to 0, the drive decelerates with DRV.DEC.
1	1	1	Set the "Drive Halt" bit from 0 to 1 to have the drive follow the master's set-point values.

## 6.3 Encoder Position on Power Up

This function can be used to detect movements of the motor while the drive is unpowered. An absolute feedback measurement system is required. On powering up the drive, the value of FB1.INITPSTATUS reflects if the machine has moved out of the position window (FB1.INITPWINDOW). FB1.INITPSAVED returns the last stored position value after powering down the machine.

## 6.4 Position Scaling

The sercos® position scaling is independent of the configured workbench unit scaling. Use the following IDNs to configure position scaling for all position scaling dependent sercos® signals:

- IDN55 Position polarity parameter
- IDN76 Position data scaling type
- IDN79 Rotational position resolution

If linear and parameter scaling is used:

- IDN77 Linear position data scaling factor
- IDN78 Linear position data scaling exponent


### 6.4.1 Default Scaling

- Rotational Scaling
- Data reference at the motor shaft
- Degrees
- 3,600,000 increments

The default IDN settings are:

IDN76: 0x02

IDN79: 3,600,000 increments

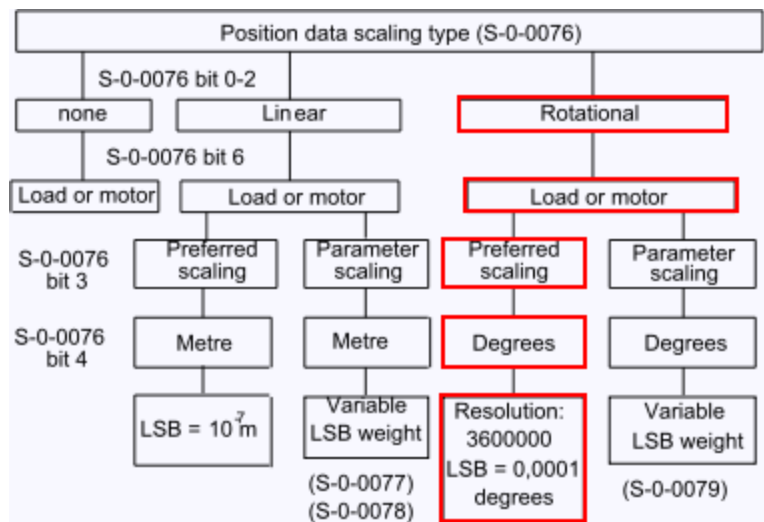

## 6.5 Velocity Scaling


The sercos® velocity scaling is independent of the configured WorkBench unit scaling. Use the following IDNs to configure velocity scaling for all velocity scaling dependent sercos® signals:

- IDN44 Velocity data scaling type
- IDN45 Velocity data scaling factor
- IDN46 Velocity data scaling exponent

### 6.5.1 Default Settings

The default setting configuration for Velocity data is set to rev/min. This scaling is used for IDN 40 Velocity Feedback Value and IDN 36 Velocity Setpoint Value.

- Rotational scaling
- Data reference at the motor shaft
- Time units in minutes
- Units for rotational scaling in revolutions

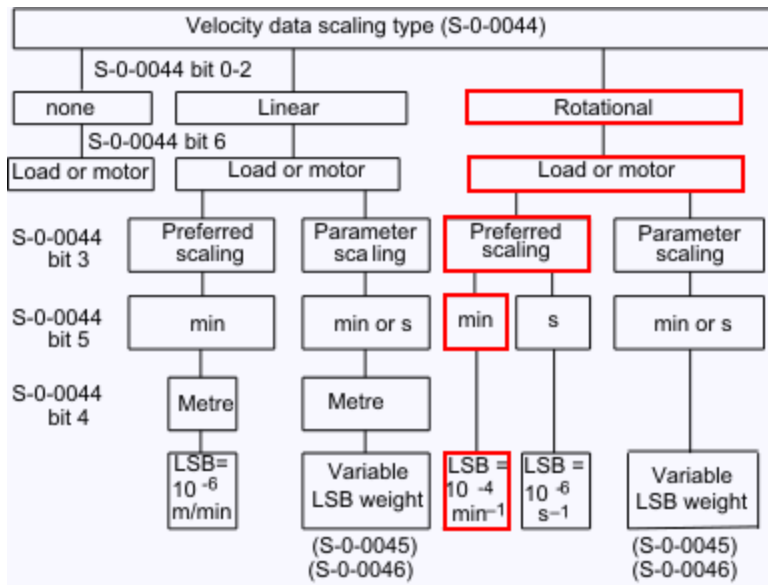

The IDN's default settings are:

S-0-0044: 0x02

S-0-0045: 1

S-0-0046: -4

## 7 sercos® IDNs

### 7.1 IDN 17: List of All Operation Data

Shows all procedure commands and parameters which are supported.

### 7.2 IDN 33: Secondary Operation Mode 1

Defines the amplifier's operational mode when the AT status word bits 8 - 10 are 1. The master requests a particular operation mode through the MDT control word (bits 8-10). The opmode becomes active when the drive is enabled.

### 7.3 IDN 32: Primary Operation Mode

Defines the amplifier's operational mode when the AT status word bits 8 - 10 are 0. The master requests a particular operation mode through the MDT control word (bits 8 -10). The opmode becomes active when the drive is enabled.

Bit	Value	Description
3 to 0	0001	Torque control
	0010	Velocity control
	0011	Position control using motor feedback

### 7.4 IDN 51: Position Feedback Value 1 (Motor Feedback)

This parameter transfers primary feedback position data from the drive.

Data Length:	4 Bytes
Data Type:	Signed decimal
Minimum:	0
Maximum:	Position resolution
Units:	IDN 76
Default:	1048576
Scaling/Resolution LSB:	Depends on IDN 76
Non-Volatile:	No
Write Protection:	Yes
Cyclic Transfer:	Yes

### 7.5 IDN 52: Reference Distance 1

This parameter describes the distance between the machine zero point and the reference point related to the motor feedback.

For absolute homing the reference distance 1 is the absolute position of the axis upon completion of the homing sequence with procedure command IDN 447.

Data Length:	4 Bytes
Data Type:	Signed decimal
Minimum:	0
Maximum:	Position resolution

Units:	Position scaling
Default:	0
Position after decimal point:	HOME.P
Scaling/Resolution LSB:	Depends on IDN 76
Non-Volatile:	Yes
Write Protection:	No
Run-Up Check:	n/a
Cyclic Transfer:	No

## 7.6 IDN 53 Position Feedback Value 2 (External Feedback)

This parameter transfers secondary feedback position data from the drive.

Data Length:	4 Bytes
Data Type:	Signed decimal
Minimum:	0
Maximum:	Position resolution
Units:	IDN 76
Default:	1048576
Scaling/Resolution LSB:	Depends on IDN 76
Non-Volatile:	No
Write Protection:	Yes
Cyclic Transfer:	Yes

## 7.7 IDN 76: Position Data Scaling Type

Different kind of scalings are supported. For using the rotational scaling, the IDN 79 is used to calculate the position scaling.

Bit 7 in IDN 76 enables and disables the modulo calculation (PL.MODPEN). The fieldbus command position values are now supporting the "Shortest Distance" mode if PL.MODPDIR is set to 3.

## 7.8 IDN 79: Rotational Position Resolution

This parameter defines the rotational position resolution for all position data.

## 7.9 IDN 92: Bipolar Torque Limit

The value of bipolar torque is scaled in 0,1 % and a 100% (raw 1000) means a current limit of the continuous current of the drive (DRV.ICONT). The value can also be changed > 100% up to DRV.IPEAK. The bipolar torque limit will change the Workbench parameters IL.LIMITx.

## 7.10 IDN 99: Command: Reset Class 1 Diagnostic (Clear Fault)

If this procedure command is received by the sub-device via the service channel, then all diagnostic events with the class error (C1D) are deleted. If the cause of an diagnostic event with the class "error" is still active, then the corresponding event will be generated again.

## 7.11 IDN 103: Modulo Value

IDN 103 shows the modulo range and sets ASCII parameters PL.MODP1 to zero and PL.MODP2 to modulo range -1.

### 7.12 IDN 116: Resolution Feedback 1

The corresponding ASCII command is FB1.PSCALE and the resolution for feedback 1 is calculated through  $2^{FB1.PSCALE}$ . The default value is  $2^{20}$ . The value can be set to other power of two resolutions.

### 7.13 IDN 117: Resolution Feedback 2

This parameter defaults to  $2^{20}$  and cannot be modified.

### 7.14 IDN 134: Drive Control

The drive control word within the MDT is stored within IDN134 as a diagnostic aid. More detailed information can be found in the sercos® standards.

Data Length:	2 Bytes
Data Type:	Binary
Minimum:	n/a
Maximum:	n/a
Units:	n/a
Default:	n/a
Position after decimal point:	0
Scaling/Resolution LSB:	1
Non-Volatile:	No
Write Protection:	Always
Run-Up Check:	n/a
Cyclic Transfer:	MDT

### 7.15 IDN135: Drive Status

The AT drive status word is stored within IDN135 as a diagnostic aid.

Bit 13: Is set if an C1D error has occurred. The drive decelerates and disables. The fault reaction depends on the specific faults.

Bit 12: Is set if a warning occurs. In case of no warning this bit is set to 0.

Bit 3:

0	Drive ignores the command values	For example, during drive halts, drive controlled functions, and programmed delay times.
1	Drive follows the command values	

Data Length:	2 Bytes
Data Type:	Binary
Minimum:	n/a
Maximum:	n/a
Units:	n/a

Default:	n/a
Position after decimal point:	0
Scaling/Resolution LSB:	1
Non-Volatile:	No
Write Protection:	Always
Run-Up Check:	n/a
Cyclic Transfer:	MDT

### 7.16 IDN 175: Displacement Parameter 1

The drive calculates the difference between the old position feedback values and the new position feedback values when the procedure command "Set absolute position" (IDN 447) is active.

Data Length:	4 Bytes
Data Type:	Signed
Minimum:	0
Maximum:	Position resolution
Units:	Position scaling
Default:	0
ASCII	FB1.OFFSET
Scaling/Resolution LSB:	Depends on IDN 176
Non-Volatile:	Yes
Write Protection:	Always
Run-Up Check:	n/a
Cyclic Transfer:	No

### 7.17 IDN 187: IDN-list of Configurable Data as Producer

List of all IDNs, which can be mapped into the AT telegram (e.g. position motor feedback (IDN 51)).

### 7.18 IDN 188: List of IDN-list of Configurable Data as Consumer

List of all IDNs, which can be mapped into the MDT telegram (command values like velocity command (IDN 36))

### 7.19 IDN 189: Following Distance

Following distance = position command value – position feedback value 1 or 2. Can be mapped into the AT telegram. Corresponds to PL.ERR.

### 7.20 IDN 256: Multiplication Factor 1

This parameter defines the factor that the motor feedback signal is multiplied by.

Data Length:	4 Bytes
Data Type:	Binary
Minimum:	1



Maximum:	4
Default:	1
Non-Volatile:	No
Write Protection:	No
Run-Up Check:	n/a
Cyclic Transfer:	No

### 7.21 IDN 257: Multiplication Factor 2

This parameter defines the factor that the external feedback signal is multiplied by.

Data Length:	4 Bytes
Data Type:	Binary
Minimum:	1
Maximum:	4
Default:	1
Non-Volatile:	No
Write Protection:	No
Run-Up Check:	n/a
Cyclic Transfer:	No

### 7.22 IDN 264: Back-up Working Memory Procedure Command

All storable parameters are loaded into non-volatile memory.

Data Length:	2 Bytes
Data Type:	Binary
Minimum:	n/a
Maximum:	n/a
Units:	n/a
Default:	0
ASCII	DRV.NVSAVE
Scaling/Resolution LSB:	n/a
Non-Volatile:	Yes
Write Protection:	Never
Run-Up Check:	n/a
Cyclic Transfer:	n/a

### 7.23 IDN 277: Position Feedback Type 1

The position feedback type 1 refers only to a motor feedback.

Bit Number	Value	Description
15 to 10		Reserved

6 to 7		Type of measuring system and evaluation
	x0	Relative
	01	Absolute measuring system
	11	Incremental use of an absolute measuring system.
0		Feedback type
	0	Rotational feedback
	1	Linear feedback

Data Length:	2 Bytes
Data Type:	Binary
Minimum:	n/a
Maximum:	n/a
Units:	n/a
Default:	0
ASCII	n/a
Scaling/Resolution LSB:	1
Non-Volatile:	No
Write Protection:	No
Run-Up Check:	n/a
Cyclic Transfer:	No

## 7.24 IDN 403: Position Feedback Value Status

The drive will set bit 1 or 2 when the procedure commands for homing are successful (IDN 447 "Set absolute Homing procedure").

The position feedback value status can be assigned to a real-time bit.

Bit Number	Value	Description
15 to 3		Reserved
2		Status of selected position feedback value 2
	0	Not referenced to machine zero point
	1	Referenced to machine zero point
1		Status of selected position feedback value 1
	0	Not referenced to machine zero point
	1	Referenced to machine zero point
0		Status of selected position feedback value
	0	Not referenced to machine zero point
	1	Referenced to machine zero point

Data Length:	2 Bytes
Data Type:	Binary

Minimum:	n/a
Maximum:	n/a
Units:	n/a
Default:	0
ASCII	n/a
Scaling/Resolution LSB:	1
Non-Volatile:	No
Write Protection:	No
Run-Up Check:	n/a
Cyclic Transfer:	No

### 7.25 IDN 447: Set Absolute Position Procedure Command

The drive performs the absolute position procedure command depending on the control word (IDN 448).

The difference between position feedback values (IDN 51 and the reference distance (IDN 52) is calculated and stored in the displacement parameter (IDN175).

Data Length:	2 Bytes
Data Type:	Binary
Minimum:	n/a
Maximum:	n/a
Units:	n/a
Default:	0
ASCII	n/a
Scaling/Resolution LSB:	n/a
Non-Volatile:	n/a
Write Protection:	Never
Run-Up Check:	n/a
Cyclic Transfer:	n/a

### 7.26 IDN 448: Set Absolute Position Control Word

The control word specific which encoder is used for procedure command "set absolute position procedure command" (IDN 447).

Bit Number	Value	Description
15 to 3		Reserved
2		Absolute homing mode in the drive
	0	The control unit requests the drive to support absolute homing "without drive enabled."
	1	The control unit requests the drive to support absolute homing "with drive enabled."
1		Position feedback 2
	0	Not selected

	1	Selected for absolute homing
0		Position feedback 1
	0	Not selected
	1	Selected for absolute homing

Data Length:	2 Bytes
Data Type:	Binary
Minimum:	n/a
Maximum:	n/a
Units:	n/a
Default:	0
ASCII	n/a
Scaling/Resolution LSB:	1
Non-Volatile:	No
Write Protection:	No
Run-Up Check:	n/a
Cyclic Transfer:	No

### 7.27 IDN 1040: Slave Address

The sercos® slave address can be stored via writing to S-0-1040. A write procedure to this IDN will also trigger a DRV.NVSAVE and the user should be aware that all NV parameter inclusive the sercos® slave address are stored.

See also S3.ADDRESS (→ p. 16)

### 7.28 IDNP2285: FB1.INITPSAVED

This parameter reports the position feedvalue (IDN 51) that was saved at the last power-down. The position is scaled in sercos® units.

Data Length:	4 Bytes
Data Type:	Signed
Minimum:	0
Maximum:	Position resolution
Units:	Position scaling
Default:	0
ASCII	FB1.INITPSAVED
Scaling/Resolution LSB:	Depends on IDN 76
Non-Volatile:	Yes
Write Protection:	Always
Run-Up Check:	n/a
Cyclic Transfer:	No

### 7.29 IDNP2287: FB1.INITPSTATUS

This parameter reports the status of the initial position comparison:

Value	Description
0	Initial position check is in progress.
1	Initial position check is disabled.
2	Position difference between power-up and power-down is less than value of FB1.INITPWINDOW at start up.
3	Position difference between power-up and power-down is greater than or equal to value of FB1.INITPWINDOW at start up.
4	Initial position check encountered an error condition.

Data Length:	4 Bytes
Data Type:	Unsigned
Minimum:	0
Maximum:	4
Units:	N/A
Default:	0
ASCII	FB1.INITPSTATUS
Scaling/Resolution LSB:	N/A
Non-Volatile:	No
Write Protection:	Always
Run-Up Check:	n/a
Cyclic Transfer:	No

### 7.30 IDNP2289: FB1.INITPWINDOW

This parameter defines the amount by which the position measured at power-up may differ from the position saved at power-down. If the difference is less than the window size, the position change at power off is considered small, and homing may be avoided. If the difference is greater than or equal to the window size, the position change during power off is large enough to require homing. Changes in the window size take effect after a non-volatile memory save and a power cycle. A window value of 0 disables the initial position check.

Data Length:	4 Bytes
Data Type:	Unsigned
Minimum:	0
Maximum:	Position resolution
Units:	Position scaling
Default:	0
ASCII	FB1.INITPWINDOW
Scaling/Resolution LSB:	Depends on IDN 76
Non-Volatile:	Yes
Write Protection:	Always
Run-Up Check:	n/a
Cyclic Transfer:	No

### 7.31 IDNP3050: Analogue Output User

Sets the analogue output value.

Data Length:	2 Bytes
Data Type:	Signed
Minimum:	-10
Maximum:	10
Units:	Volts
Default:	0
ASCII	AOUT.VALUEU
Scaling/Resolution LSB:	1
Non-Volatile:	No
Write Protection:	Always
Run-Up Check:	n/a
Cyclic Transfer:	MDT

### 7.32 IDNP3051: Analogue Output Value

Reads the analogue output value.

Data Length:	2 Bytes
Data Type:	Signed
Minimum:	-10
Maximum:	10
Units:	Volts
Default:	0
ASCII	AOUT.VALUE
Scaling/Resolution LSB:	1
Non-Volatile:	No
Write Protection:	Always
Run-Up Check:	n/a
Cyclic Transfer:	AT

### 7.33 IDNP3036: Analogue Input Value

Reads the analogue input value.

Data Length:	2 Bytes
Data Type:	Signed
Minimum:	n/a
Maximum:	n/a
Units:	n/a
Default:	n/a
Position after decimal point:	0

Scaling/Resolution LSB:	1
Non-Volatile:	No
Write Protection:	Always
Run-Up Check:	n/a
Cyclic Transfer:	MDT

### 7.34 IDNP3060: Digital Output 1 User

Sets the digital output state.

Data Length:	2 Bytes
Data Type:	Binary
Minimum:	0
Maximum:	1
Units:	n/a
Default:	0
Position after decimal point:	0
ASCII	DOUT1.STATEU
Non-Volatile:	No
Write Protection:	Always
Run-Up Check:	n/a
Cyclic Transfer:	MDT

### 7.35 IDNP3061: Digital Output 1 Value

Read the digital output state.

Data Length:	2 Bytes
Data Type:	Binary
Minimum:	0
Maximum:	1
Units:	n/a
Default:	n/a
Position after decimal point:	0
ASCII	DOUT1.STATE
Non-Volatile:	No
Write Protection:	Always
Run-Up Check:	n/a
Cyclic Transfer:	AT

### 7.36 IDNP3062: Digital Output 2 User

Sets the digital output state.

Data Length:	2 Bytes
--------------	---------

Data Type:	Binary
Minimum:	0
Maximum:	1
Units:	n/a
Default:	0
Position after decimal point:	0
ASCII	DOUT2.STATEU
Non-Volatile:	No
Write Protection:	Always
Run-Up Check:	n/a
Cyclic Transfer:	MDT

### 7.37 IDNP3063: Digital Output 2 Value

Read the digital output state.

Data Length:	2 Bytes
Data Type:	Binary
Minimum:	0
Maximum:	1
Units:	n/a
Default:	n/a
Position after decimal point:	0
ASCII	DOUT2.STATE
Non-Volatile:	No
Write Protection:	Always
Run-Up Check:	n/a
Cyclic Transfer:	AT

### 7.38 IDNP3030 Digital Inputs Value

Read the digital input state.

Data Length:	4 Bytes
Data Type:	Binary
Minimum:	0
Maximum:	0xFF
Units:	n/a
Default:	n/a
ASCII	DIN.STATES
Scaling/Resolution LSB	1
Non-Volatile:	No
Write Protection:	Always



Run-Up Check:	n/a
Cyclic Transfer:	AT

## About Kollmorgen

Kollmorgen is a leading provider of motion systems and components for machine builders. Through world-class knowledge in motion, industry-leading quality and deep expertise in linking and integrating standard and custom products, Kollmorgen delivers breakthrough solutions that are unmatched in performance, reliability and ease-of-use, giving machine builders an irrefutable marketplace advantage.

For assistance with your application needs, visit [www.kollmorgen.com](http://www.kollmorgen.com) or contact us at:

### North America KOLLMORGEN

203A West Rock Road  
Radford, VA 24141 USA

**Inter-** [www.kollmorgen.com](http://www.kollmorgen.com)  
**net**

**E-Mail** [sup-  
port@kollmorgen.com](mailto:sup-port@kollmorgen.com)

**Tel.:** +1 - 540 - 633 - 3545

**Fax:** +1 - 540 - 639 - 4162

### Europe KOLLMORGEN Europe GmbH

Pempelfurtstraße 1  
40880 Ratingen, Germany

**Inter-** [www.kollmorgen.com](http://www.kollmorgen.com)  
**net**

**E-Mail** [tech-  
nik@kollmorgen.com](mailto:tech-nik@kollmorgen.com)

**Tel.:** +49 - 2102 - 9394 - 0

**Fax:** +49 - 2102 - 9394 - 3155

### Asia KOLLMORGEN

Rm 2205, Scitech Tower, China  
22 Jianguomen Wai Street

**Inter-** [www.kollmorgen.com](http://www.kollmorgen.com)  
**net**

**E-Mail** [sales.asi-  
a@kollmorgen.com](mailto:sales.asia@kollmorgen.com)

**Tel.:** +86 - 400 666 1802

**Fax:** +86 - 10 6515 0263

**KOLLMORGEN**<sup>®</sup>

*Because Motion Matters™*